

WARRANTY REGISTRATION

LISTER warranties the METEOR Trimmer against defects in all materials and workmanship for a period of one year from the date of purchase.

Please retain this leaflet and keep in a safe place. In the event of a warranty claim, return it with your Trimmer.

NAME.....

ADDRESS.....

.....

.....

.....

POSTCODE.....

DATE OF PURCHASE.....



LISTER SHEARING EQUIPMENT LIMITED


LONG STREET, DURSLEY, GLOS. GL11 4HR

Tel: +44 (0) 1453 544832/3 Fax: +44 (0) 1453 545110

www.lister-shearing.co.uk



METEOR TRIMMER

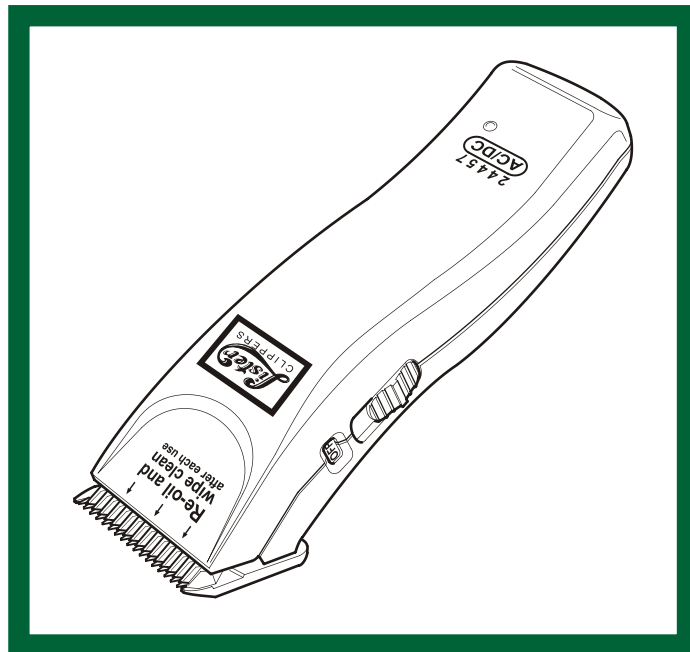

FEATURES

Easy to handle, easy to oil, perfect for cutting.
Choice of blades & 'slide on' blade guides (set of 4) to give varying clip lengths. Blades can be re-sharpened, return them to your dealer or the Lister factory.

SAFETY WARNINGS

Check voltage ratings
Unplug Trimmer before cleaning
Keep Trimmer away from water
Keep Trimmer out of reach of children

PREPARATION BEFORE USE

Ensure Trimmer is adequately charged

CHARGING THE BATTERY

Do NOT let the battery run down until the Trimmer stops before charging.
First time charge should be between 12-14 hours.
Further charges between 2-2.5 hours. Other than initial charge, do not charge the battery over 4 hours.
To charge, switch to "OFF" position and connect Trimmer to charger. Trimmer LED will be on during charging.
Do not charge the battery in temperatures lower than 0°C or higher than 40°C as it will reduce battery life.
The charger can act as an emergency mains adaptor, plug in the adaptor and wait a few minutes before using the Trimmer. Do NOT run continuously with charger, only in an emergency.

STORAGE


Store the Trimmer fully charged. Battery will gradually lose its charge over long periods. If it loses all charge, it will not regain full capacity until fully charged and discharged 2 or 3 times, so clipping time may be significantly reduced for the first few times after prolonged storage.

OILING

Trimmer blades are oiled before leaving the factory, and should be regularly oiled when clipping. Use only the oil provided with the Trimmer or Lister R15 oil. Do not use oils with solvents as they evaporate rapidly and damage the blades.

BLADES

Switch off/unplug Trimmer before changing blades
Clean stray hair away from blades and Trimmer with brush provided.
To remove blade sets, DO NOT UNDO THE SCREWS, simply push down on the top of the blades with your thumb as shown in the diagram below
Keep blades oiled during use, and lightly coat with oil before storing to prevent rusting.

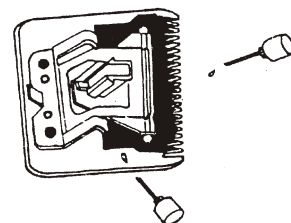

TROUBLESHOOTING

Problem	Cause	Solution
Blades do not fit	Blades not aligned with crank	Turn on Trimmer before attaching
Not enough power	Trimmer needs recharge or blades need oiling	Connect to AC charger
Not Cutting	Blades blunt or need oiling	Oil blades or return for sharpening
Trimmer wont run after storing	See Storage	Recharge 2-3 times
Trimmer wont run when charged	Internal fault	Return for service /repair